


## Ocean RX

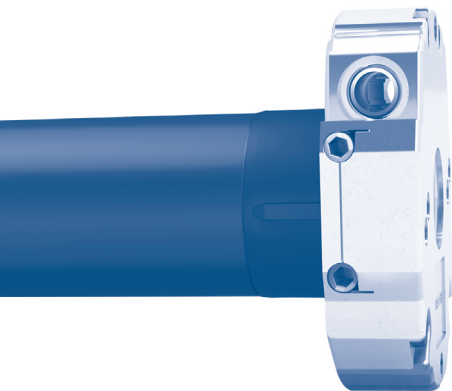

MOTORE TUBOLARE RADIO CON  
REGOLAZIONE MANUALE DEL FINECORSO  
E MANOVRA DI SOCCORSO

I

RADIO TUBULAR MOTOR WITH  
MECHANICAL LIMIT SWITCH ADJUSTMENT  
AND MANUAL OVERRIDE DEVICE

GB

MOTOR MIT INTEGRIERTEM FUNKEMPFÄNGER  
MECHANISCHER ENDABSCHALTUNG  
UND NHK-NOTHANDKURBELGETRIEBE

D

MOTEUR TUBULAIRE RADIO AVEC  
RÉGLAGE MÉCANIQUE DU FIN DE COURSE  
MANOEUVRE DE SECOURS

F

MOTOR RADIO CON REGULACIÓN MECÁNICA  
DE LOS FINES DE CARRERA  
MANIOBRA DE EMERGENCIA





E



## Table of contents:

How to prepare the motor .....	p. 22
Electrical connections .....	p. 23
Compatible remote controls .....	p. 24
Key to symbols .....	p. 24
Command sequences example .....	p. 25
Function open/close programming remote control .....	p. 26-27
Setting the first remote control .....	p. 28
Automatic disabling of the first remote control setting function .....	p. 28
Adjustment of the limit switches .....	p. 28
Setting the rotation direction of the motor .....	p. 29
Setting of additional remote controls .....	p. 30
Remote control memory clearing .....	p. 30
Restore the factory mode .....	p. 30
Full memory clearing .....	p. 31
Adjustment of the limits switches on torque .....	p. 32
Closing force adjustment .....	p. 32
Behavior of motors on limit switch and obstacle detection .....	p. 32
<b>Compatible devices</b>	
Mistral sensor .....	p. 33
Rugiada (TX rain-sensor) .....	p. 34
Anemometers .....	p. 34
<b>Special functions</b>	
Short-term setting of a remote control .....	p. 36
Setting the A530058 pocket remote control .....	p. 36
Electric wiring to motor command for UP-DOWN mode (2 independent UP-DOWN buttons) .....	p. 37
Command management from white wire .....	p. 38
EU Declaration of conformity .....	p. 93



## HOW TO PREPARE THE MOTOR

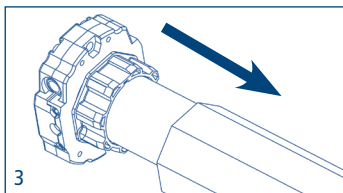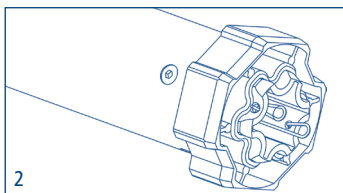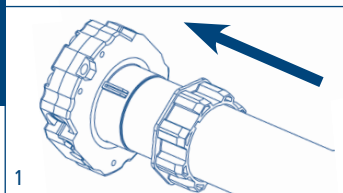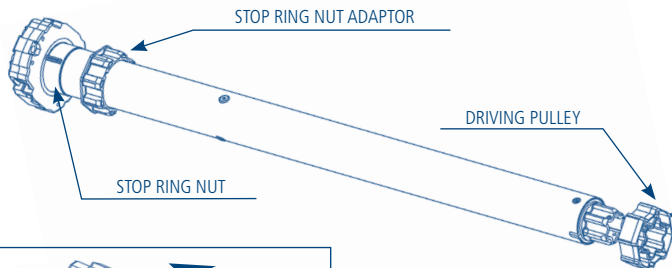

**NB:** If you use tubes with a round form, the driving pulley must be fixed to the tube, and the installation is to be paid by the person who installs the system. For other tube sections the fixing is optional but strongly recommended.


## ELECTRICAL CONNECTIONS

- In order to prevent dangerous situations or malfunctioning, the electrical command elements wired to the motor must be sized according to the motor's electrical features.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the national installation standards.
- For outdoor use, provide the appliance with a supply cable with designation H05RN-F containing at least 2% of carbon.
- If not used, the white wire must be insulated. It is dangerous to touch the white wire when the motor is powered.

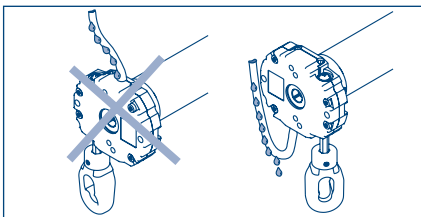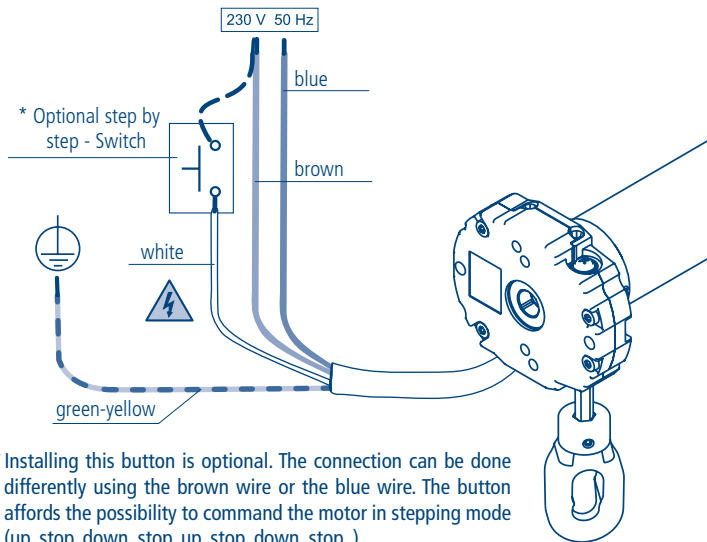


# COMPATIBLE REMOTE CONTROLS


## GIRO

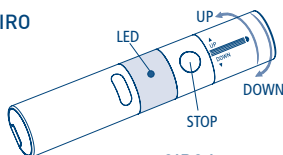

## GIRO Wall

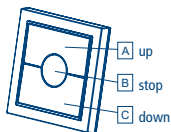


## GIRO Plus

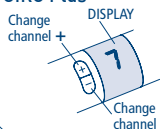


## GIRO Lux

Activating the Sun sensor

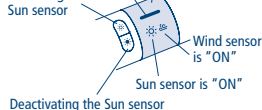

Deactivating the Sun sensor


## GIRO P-Lux

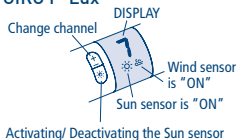

Activating/ Deactivating the Sun sensor


## POP

### POP Lux

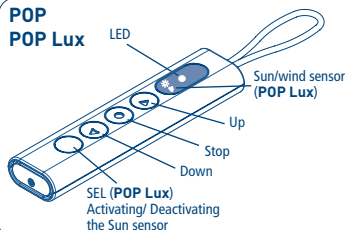


## POP Plus


### POP P-Lux

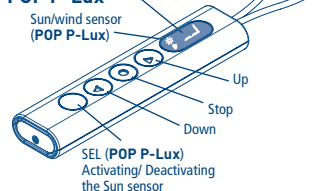

SKIPPER  
SKIPPER Lux  
SKIPPER Plus  
SKIPPER P-Lux

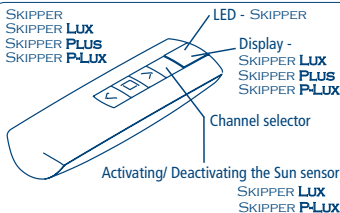

SKIPPER LCD  
SKIPPER SENSO

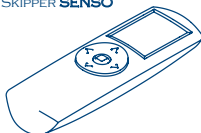


Check the specific instruction book


A530058 Remote Control with 4 independent channels




## KEY TO SYMBOLS

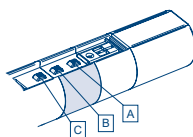

## GIRO

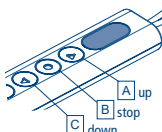




## POP

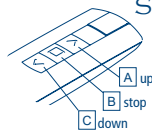


## SKIPPER



## KEY TO SYMBOLS

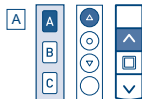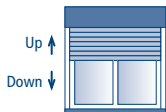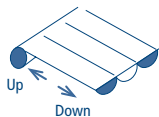

Press button A

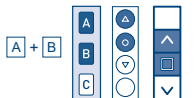

Press buttons A and B at the same time



short motor rotation  
in one direction




long motor rotation  
in other direction




double short  
rotation

## COMMAND SEQUENCES EXAMPLE


Most of the command sequences have three distinct steps, at the end of which the motor indicates if the step has been concluded positively or not, by turning in different ways. This section is provided to demonstrate the motor indications. The buttons must be pressed as shown in the sequence, without taking more than 4 seconds between one step and the next. If more than 4 seconds are taken, the command is not accepted and the sequence must be repeated. Command sequence example:

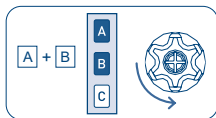

Step 1

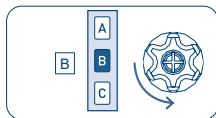


Step 2

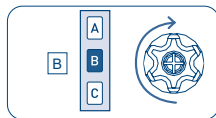


Step 3


As we can see from the example, when the sequence ends positively, the motor returns to its starting position in one long rotation. In fact, two short rotations in the same direction correspond to one long rotation in the opposite direction. The motor returns to the starting position even when the sequence is not completed; in this case by performing one or two short rotations. Example of a wrong sequence:

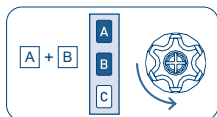

Step 1

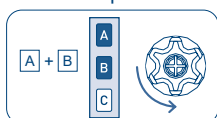

Step 1

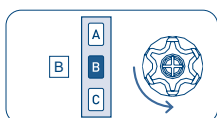


Step 2



# FUNCTION OPEN/CLOSE PROGRAMMING REMOTE CONTROL SKIPPER PLUS - SKIPPER LUX - SKIPPER P-LUX REMOTE CONTROL POP PLUS - POP LUX - POP P-LUX


To prevent accidental changes to the programming of the motor during the daily use of the remote control, the possibility of programming is disabled automatically 8 hours after sending the last sequence (A+B or B+C).

## CHECKING THE STATUS OF THE FUNCTION

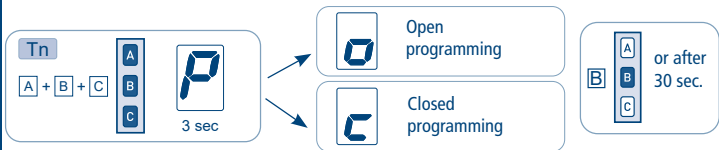

To change the status of the function, see the sequences "ENABLE/DISABLE PROGRAMMING".

## ENABLE PROGRAMMING

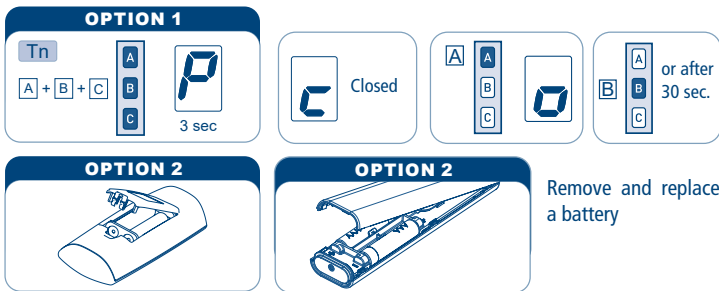

Proceed with programming as the instructions booklet.

## DISABLE PROGRAMMING






# FUNCTION OPEN/CLOSE PROGRAMMING REMOTE CONTROL SKIPPER - SKIPPER WALL - SERIES GIRO


To prevent accidental changes to the programming of the motor during the daily use of the remote control, the possibility of programming is disabled automatically 8 hours after sending the last sequence (A+B or B+C).

## CHECKING THE STATUS OF THE FUNCTION

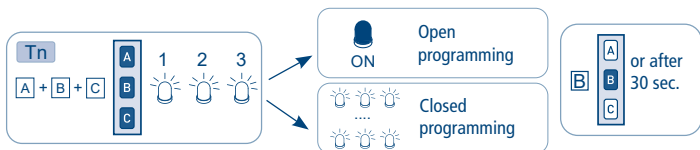

To change the status of the function, see the sequences "ENABLE/DISABLE PROGRAMMING".

## ENABLE PROGRAMMING

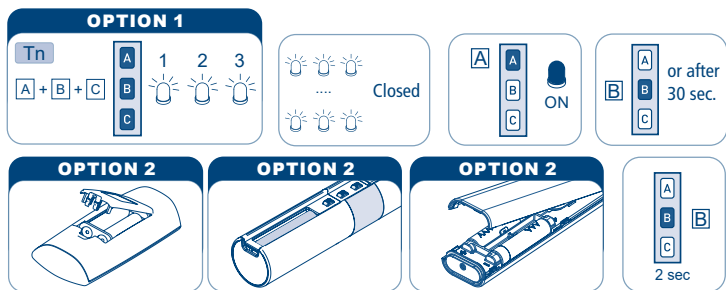

Remove one battery and wait minimum 5 seconds or press any button.

Proceed with programming as the instructions booklet.

## DISABLE PROGRAMMING




## SETTING THE FIRST REMOTE CONTROL


This operation can only be performed when the motor is new, or after a total delete of the memory.

**During this step, power up only one motor at time!**


T1: First remote control to be set

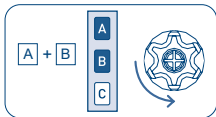

T1

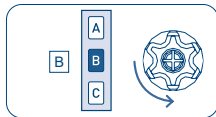

T1

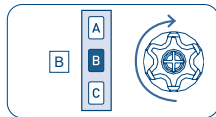

T1 (2 sec)



### AUTOMATIC DISABLING OF THE FIRST REMOTE CONTROL SETTING FUNCTION

Every time you connect the power supply to the motor, you have 3 hours to store the first remote control. After this time, the ability to store the remote control is disabled. To reset the timer of the function you have to disconnect and reconnect the power supply to the motor.

**NB: Until the remote control has been memorised, the wired control of the motor will operate in "dead-man" mode.**

### ADJUSTEMENT OF THE LIMIT SWITCHES

1. To decide which adjusting screw to fix, simply watch the direction of rotation of the stop ring nut: if the stop ring nut pulled by the roller goes in direction A, use the adjusting screw A to set the limit switch in that direction. If it goes to the opposite direction (B), use the adjusting screw B.
2. Start up the awning or the rolling shutter in the direction in which you wish to set the first limit switch. After a few turns the motor will stop on the preset stop.
3. Screw the adjusting screw suited to the direction (see point 1.) in direction "+" till it gets to the chosen position.
4. Invert the engine sense of direction and set the second limit switch.

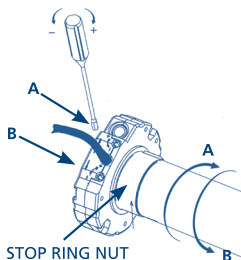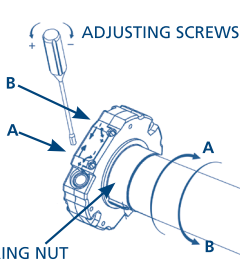


## SETTING THE ROTATION DIRECTION OF THE MOTOR

The operation can be performed via remote control or using the white wire. Every time you perform one of the two sequences below you reverse the output direction of the motor.

### From the remote control:


Tn: Already programmed remote control

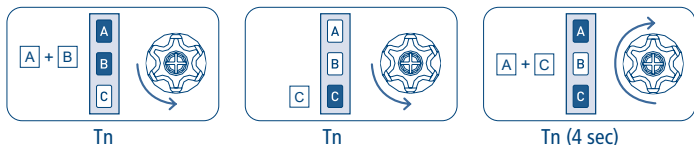

### From the wired control:

The sequence of this operation is the following:

- 1) Disconnect the power supply from the motor, via the main switch for example.
- 2) Connect the white motor wire to the brown wire (phase) or to the blue wire (neutral).
- 3) Connect the power supply to the motor, which rotates briefly in one direction.
- 4) Disconnect the power supply from the motor for at least 4 seconds.
- 5) Connect the motor to the power supply, after about 2 seconds the motor performs a short rotation up or down. Within 3 seconds disconnect the power supply, for example using the main switch.
- 6) Disconnect the white wire from the motor.

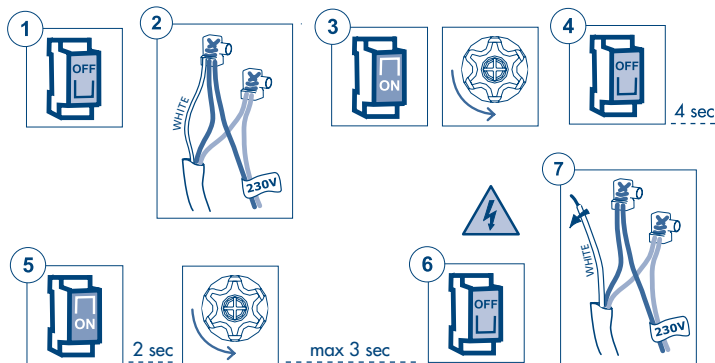


## SETTING OF ADDITIONAL REMOTE CONTROLS


Up to 15 remote controls can be set.

Tn: Already programmed remote control


Tx: Additional remote control

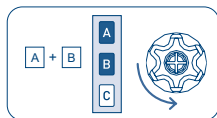

Tn

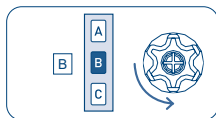

Tn

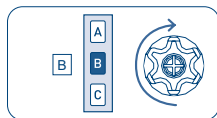


Tx (2 sec)


## REMOTE CONTROL MEMORY CLEARING

It is possible to delete singly all the memorized remote controls. When the last one is deleted the motor initial condition is restored. The same applies to the single channels of a multichannel remote control: just select the channel to cancel.


Tn: Remote control to be cleared

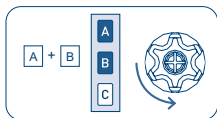

Tn

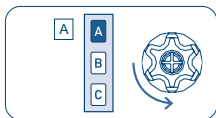


Tn

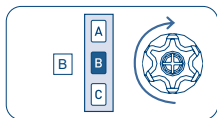


Tn (2 sec)

## RESTORE THE FACTORY MODE


Tn: Already programmed remote control

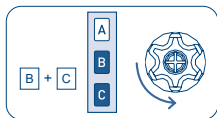

Tn

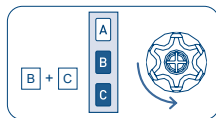

Tn

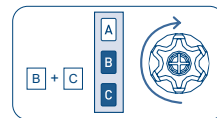

Tn (4 sec)


The following settings are now in factory mode: direction of rotation, timeout and white wire control mode.

## FULL MEMORY CLEARING


The full memory clearing can be performed in two ways:

### 1) WITH THE REMOTE CONTROL


Tn: Already programmed remote control

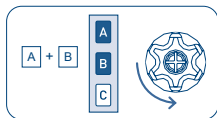

Tn

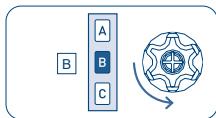

Tn

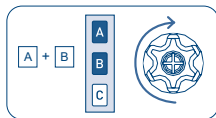

Tn (4 sec)


### 2) WITH THE WHITE WIRE

Do this operation only in case of emergency, if all remote controls are no longer operating. To delete the memory we have to access the white wire of the motor.

The sequence of this operation is the following:

- 1) Disconnect the power supply from the motor, via the main switch for example.
- 2) Connect the white motor wire to the brown wire (phase) or to the blue wire (neutral).
- 3) Connect the power supply to the motor, which rotates briefly in one direction.
- 4) Disconnect the power supply from the motor for at least 4 seconds.
- 5) Connect the motor to the power supply, after about 2 seconds the motor performs a short rotation up or down. After about 6 seconds the motor performs a long rotation in the opposite direction.
- 6) Disconnect the power supply from the motor.
- 7) Separate the white wire from the brown/blue wire. Insulate the white wire, in an appropriate way, before reconnecting the power supply.

At this point it is possible to proceed with the setting of the first remote control.

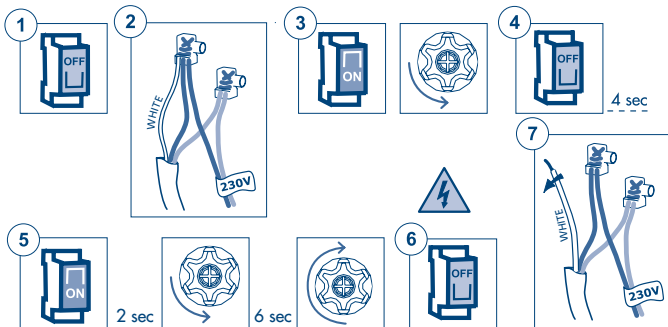


## ADJUSTMENT OF THE LIMITS SWITCHES ON TORQUE

### LIMIT SWITCH SETTING ON A CASSETTE AWNING (closing on torque)

On a cassette awning is possible to set the upper limit on torque closing. Connect the motor, set the remote control and move the motor by moving the adjustment screws in +direction as close as possible to the upper limit switch and stop the motor. Now move again the adjustment screws for three (3) turns beyond the upper limit.

### CLOSING FORCE ADJUSTMENT

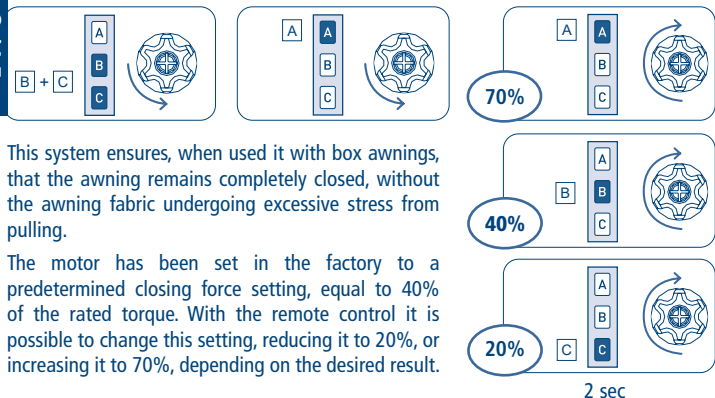


### BEHAVIOR OF MOTORS ON LIMIT SWITCH AND OBSTACLE DETECTION

	UPPER LIMIT SWITCH IN TORQUE CLOSING (Cassette awnings or rolling shutter)	OBSTACLE DETECTION IN UP MOVEMENT
Ocean RX	The motor goes every time to the limit-stop and does not a reverse movement.	The motor stops and does not a reverse movement.


## COMPATIBLE DEVICES

### MISTRAL SENSOR

It detects movements caused by the wind on the awning arms.


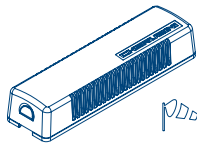


MISTRAL- Ref. A520012

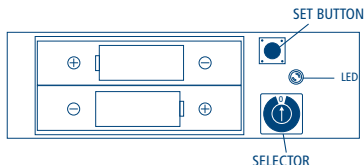

### SETTING THE SENSOR



To associate the sensor to the control unit, a remote control must be already memorized. Set the selector to the 0 position and then perform this sequence:

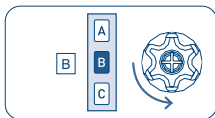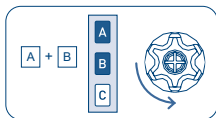

2 sec

### DELETING THE SENSOR


To delete the sensor from the control unit, an already programmed remote control must be used. Set the selector to the 0 position; if active wait for the sensor to go off and then perform this sequence:

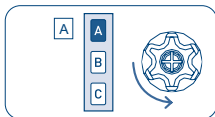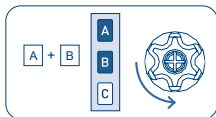

2 sec

For the complete description of the functions of this device see the instruction booklet that came in the box.

## RUGIADA (TX RAIN-SENSOR)

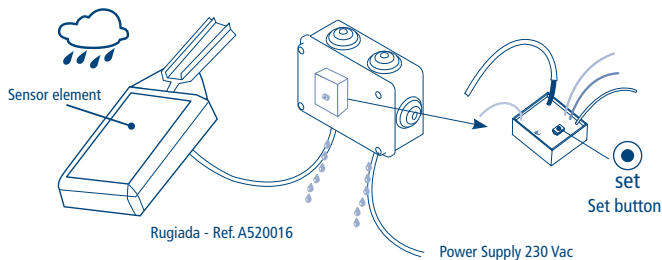


## ANEMOMETERS




## SETTING

To associate the sensor to the control unit, a remote control must be already memorised. The setting sequence is the following:

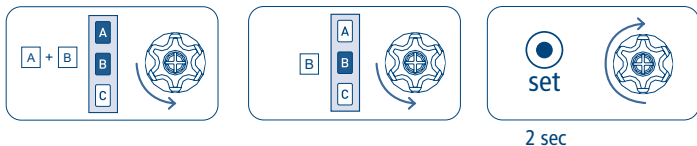

## DELETING

To delete the sensor from the control unit, an already programmed remote control must be used. The deleting sequence is the following:

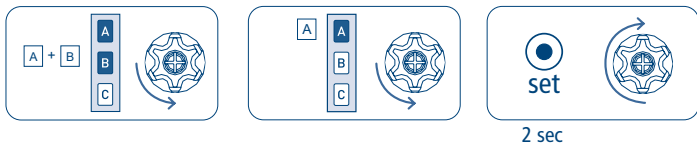

For the complete description of the functions of these devices see the instruction booklet that came in the box.



## ENABLE / DISABLE THE SUN SENSOR


(WindTec Lux)

To enable (automatically) or disable (manually) the sun sensor refer to the instruction manual provided with the sensor or the remote control you want to use.

## TEST MODE (WINDTEC/WINDTEC LUX)

This function is useful to check proper radio communications and to perform the wind and sun function test.

To activate the TEST function, hold the SET button down for around 2 seconds, until the awning opens for 10 seconds and closes briefly to confirm that the test has been activated. The Test function lasts for 3 minutes, during which the wind and sunlight threshold settings can be checked, without waiting for activation times. After 3 minutes, the WindTec sensor returns to normal operational mode.

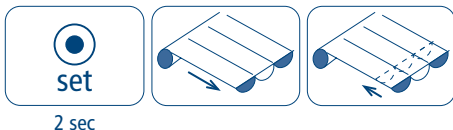

### WIND FUNCTION TEST (WINDTEC, WINDTEC LUX)

To avoid errors during the wind function test, it is suggested that the sunlight function be deactivated. By spinning the anemometer fins, when the speed detected by the sensor exceeds the threshold set, the motor commands the closing of the awnings.

### SUN FUNCTION TEST (WINDTEC LUX)

Make sure that the sunlight function is on. When the sensor detects a change in the sunlight intensity, it opens the awning if the sunlight intensity goes above the threshold set, or it closes the awning if the light intensity goes below the threshold set. It is possible to repeat this test several times, so as to find the desired adjustment levels precisely.


## SHORT-TERM SETTING OF A REMOTE CONTROL

This function makes it possible to store a remote control temporarily, for example, with the purpose of setting the limit switches during assembly in the factory. A later final saving of the remote control will be possible using the appropriate command sequence (see: "SETTING THE FIRST REMOTE CONTROL"). The operations described below can be carried out only when the motor has just come out of the factory or after a full memory clearing (see: "FULL MEMORY CLEARING"). The motor makes the following operations possible only within the time limits described in order to make sure that the short-term setting is used only in the installation or factory setting phase and not during daily use. Power up the motor, make sure that no other motors having an empty memory are powered up in the same operating range.

**Within 30 seconds after start**, press the B and C buttons simultaneously until the motor gives a confirmation signal.

**The remote control will remain stored for 5 minutes**, while the motor is powered up. After 5 minutes or when the motor has its power cut off, the remote control will be cancelled.

T1: First remote control to be set

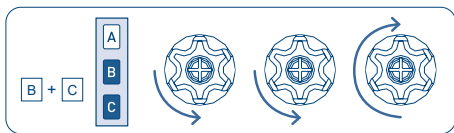

T1


## SETTING THE A530058 POCKET REMOTE CONTROL

NB: The new pocket remote control can be set only after programming of a previous remote control as the traditional Cherubini remote controls (Skipper, Giro or POP - 3 buttons Up-Down-Stop remote control).


HOW TO PROCEED TO SET THE BUTTON ON THE POCKET REMOTE CONTROL

Tn: Already programmed remote control


Tx: Pocket remote control to be set

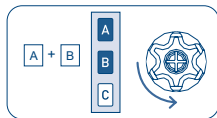

Tn

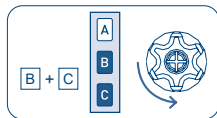

Tn

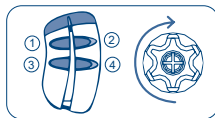

Tx (2 sec)


After to have pressed for minimal 2 seconds one of the 4 buttons on the pocket remote control, this one will be memorized on the step-by-step mode (UP-STOP-DOWN-STOP). The following buttons will be not memorized and have to be done with previous described sequence, and could be used to move additional motors.

### DELETING ONE BUTTON ON THE POCKET REMOTE CONTROL


The buttons saved may be deleted individually according to the following sequence:

Tn: Already programmed remote control


Tx: Pocket remote control with button to be deleted

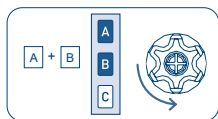

Tn

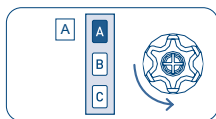

Tn

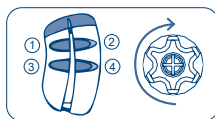


Tx (2 sec)

To confirm the operation the motor will do a short shunt and the button, which has to be pressed for minimal 2 second, will be deleted.

## ELECTRIC WIRING TO MOTOR COMMAND FOR UP-DOWN MODE (2 independent UP-DOWN buttons)

To connect the switch, use only kind of switches with mechanical or electrical interlock, to prevent to press both buttons at same time.

The motor automatically recognizes the switch-type (with 1 or 2 buttons) and sets the proper operational mode.

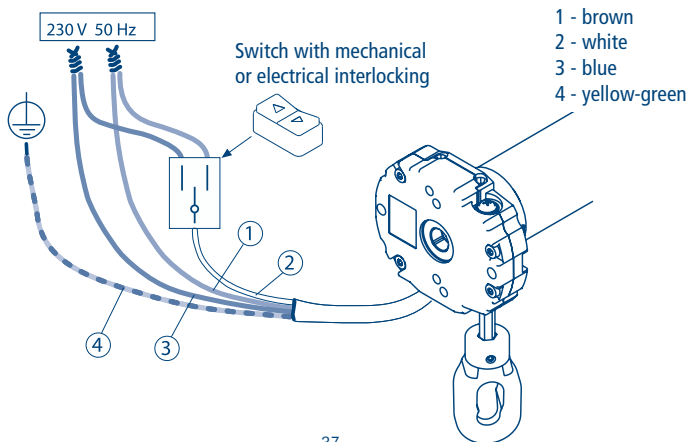


## COMMAND MANAGEMENT FROM WHITE WIRE

### UP-STOP-DOWN-STOP / UP-DOWN / UP-DOWN "DEAD MAN"


NB: The default function provided in the motors leaving the factory is UP-STOP-DOWN-STOP for singular UP/DOWN button switch. (Not for the switch with two independent UP-DOWN buttons!)

PROCEDURE TO CHANGE THE CONTROL MODE:


Tn: Already programmed remote control

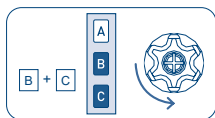

Tn

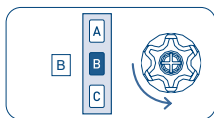

Tn

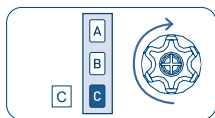


Tn (2 sec)

The possible settings are 3 and are available in the following order:


- UP-STOP-DOWN-STOP (factory setting)
- UP-DOWN (for 2 independent buttons)
- UP-DOWN "DEAD MAN" (for 2 independent buttons)

To switch from one setting to the following, perform the sequence as many times as necessary to reach the desired setting.


Mode UP-STOP-DOWN-STOP:

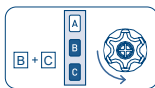

Mode UP-DOWN:

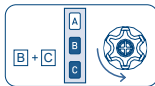

Mode UP-DOWN "DEAD MAN":

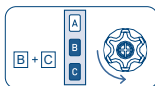

## **I DICHIARAZIONE DI CONFORMITÀ UE**

**CE** CHERUBINI S.p.A. dichiara che il prodotto è conforme alle pertinenti normative di armonizzazione dell'Unione:

Direttiva 2014/53/UE, Direttiva 2011/65/UE.

Il testo completo della dichiarazione di conformità UE è disponibile facendone richiesta sul sito: [www.cherubini.it](http://www.cherubini.it).

## **GB EU DECLARATION OF CONFORMITY**

**CE** CHERUBINI S.p.A. declares that the product is in conformity with the relevant Union harmonisation legislation:

Directive 2014/53/EU, Directive 2011/65/EU.

The full text of the EU declaration of conformity is available upon request at the following website: [www.cherubini.it](http://www.cherubini.it).

## **D EU-KONFORMITÄTSERKLÄRUNG**

**CE** CHERUBINI S.p.A. erklärt der produkt erfüllt die einschlägigen Harmonisierungsrichtvorschriften der Union:

Richtlinie 2014/53/EU, Richtlinie 2011/65/EU.

Der vollständige Text der EU-Konformitätserklärung kann unter unserer Web-Seite [www.cherubini.it](http://www.cherubini.it), gefragt werden.

## **F DÉCLARATION UE DE CONFORMITÉ**

**CE** CHERUBINI S.p.A. déclare que le produit est conforme à la législation d'harmonisation de l'Union applicable:

Directive 2014/53/UE, Directive 2011/65/UE.

Le texte complet de la déclaration UE de conformité est disponible en faisant requête sur le site internet: [www.cherubini.it](http://www.cherubini.it).

## **E DECLARACIÓN UE DE CONFORMIDAD**

**CE** CHERUBINI S.p.A. declara que el producto es conforme con la legislación de armonización pertinente de la Unión:

Directiva 2014/53/UE, Directiva 2011/65/UE.

El texto completo de la declaración UE de conformidad puede ser solicitado en: [www.cherubini.it](http://www.cherubini.it).

**note - Bem - notes - notas:**

This image shows a full page of blank handwriting practice paper. It features approximately 20 evenly spaced, horizontal blue lines across the entire page, providing a guide for letter height and placement. The background is plain white, and there are no margins, text, or other markings present.



**CHERUBINI S.p.A.**

Via Adige 55  
25081 Bedizzole (BS) - Italy  
Tel. +39 030 6872.039 | Fax +39 030 6872.040  
info@cherubini.it | www.cherubini.it

**CHERUBINI Iberia S.L.**

Avda. Unión Europea 11-H  
Apdo. 283 - P. I. El Castillo  
03630 Sax Alicante - Spain  
Tel. +34 (0) 966 967 504 | Fax +34 (0) 966 967 505  
info@cherubini.es | www.cherubini.es

**CHERUBINI France S.a.r.l.**

ZI Du Mas Barbet  
165 Impasse Ampère  
30600 Vauvert - France  
Tél. +33 (0) 466 77 88 58 | Fax +33 (0) 466 77 92 32  
info@cherubini.fr | www.cherubini.fr

**CHERUBINI Deutschland GmbH**

Siemensstrasse, 40 - 53121 Bonn - Deutschland  
Tel. +49 (0) 228 962 976 34 / 35 | Fax +49 (0) 228 962 976 36  
info@cherubini-group.de | www.cherubini-group.de

